




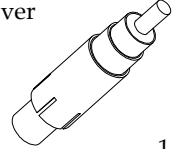
 

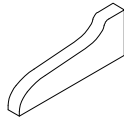
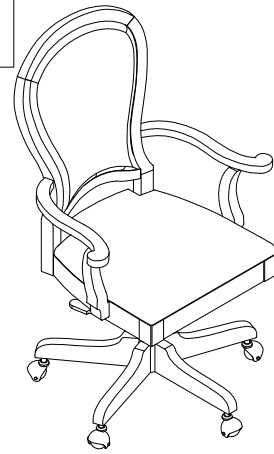


 

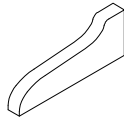
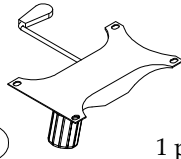
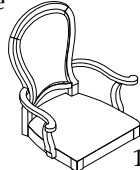
Components and Hardware List

<p>M5/16 -18 x 1-1/2" Allen Head Bolt</p>  <p>(A) 4 pcs.</p>	<p>5/16" Spring Washer</p>  <p>(B) 4 pcs.</p>	<p>5/16" Flat Washer</p>  <p>(C) 4 pcs.</p>
<p>5mm Allen Wrench</p>  <p>(D) 1 pc.</p>	<p>Wood Screw</p>  <p>(E) 10 pcs. (+10 pcs. installed)</p>	<p>Pneumatic Cylinder & Cover</p>  <p>(F) 1 pc.</p>
<p>Metal Base Frame</p>  <p>(G) 1 pc.</p>	<p>Casters</p>  <p>(H) 5 pcs.</p>	<p>Wood Base Cap</p>  <p>(I) 5 pcs.</p>



47039 / 47139

Round Back Leather Desk Chair

<p>Metal Base Frame</p>  <p>(G) 1 pc.</p>	<p>Casters</p>  <p>(H) 5 pcs.</p>	<p>Wood Base Cap</p>  <p>(I) 5 pcs.</p>	<p>Seat Control</p>  <p>(J) 1 pc.</p>	<p>Seat and Back Frame</p>  <p>(K) 1 pc.</p>
--	--	--	---	---

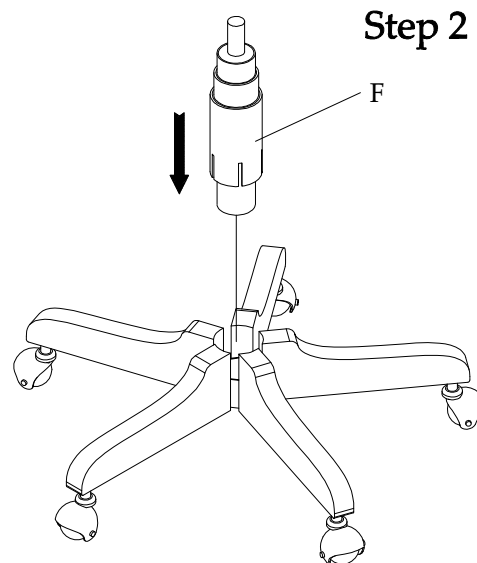
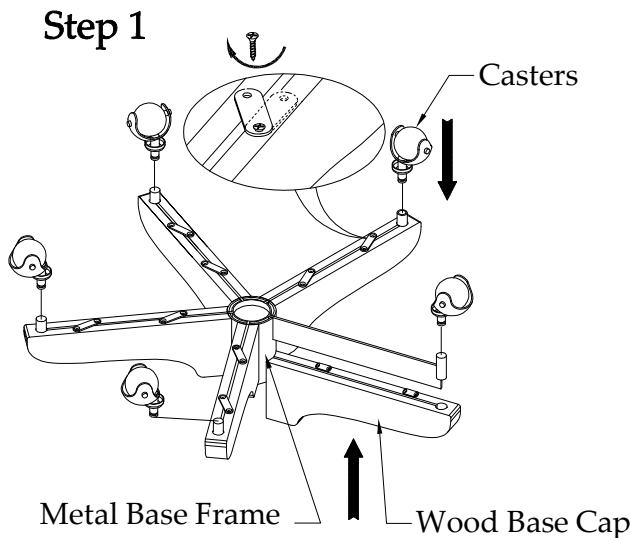
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Separate, count and check all parts against the Parts List and Hardware List above.

To prevent possible scratches, assemble on a soft surface such as a blanket or carpet.

Step 1: Place the Wood Base Cap (I) on top of each leg of the Metal Base Frame (G). Pivot the metal strap across the Wood Base Cap and using your Phillips screwdriver, attach with a wood screw (E). Repeat for all Wood Base Caps.

Step 2: Press the Casters (H) into the holes of the Metal Base Frame.

Step 3: Fit the bottom end of the Pneumatic Cylinder (F) into center of the Metal Base Frame as shown. Press down firmly on the Pneumatic Cylinder to secure. Place the plastic Covers onto the cylinder.



Step 4: Attach the Seat Control (J) to the bottom of the Chair Seat & Back (K) with Flat Washers (C), Spring Washers (B) and Allen Head Bolts (A) as shown. Tighten with the Allen Wrench.

Step 5: Fit the top of the Pneumatic Cylinder into the Seat Control. Sit on the seat to secure assembly.

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.

The lift mechanism is in a locked position for shipping. To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.

Step 3

